



## FUNCTIONAL ARMCHAIR

# AMULETT 736 PS

Amulett is available in two variants 731 PS which is fixed and 736 PS which is adjustable.

Amulett PS chairs are designed to be used in environments with with tougher safety requirements, such as a psychiatric clinic. The PS armchairs have a full-coverage, nailed box that hides the mechanism and a damask in black artificial leather to hide the gas spring. Amulett PS has a fixed upholstery, which means a different sewing method that reduces the risk of bacterial traps. In addition, all visible screws have been replaced with safety screws. The control on the Amulett 736 PS has a more discreet design to reduce attention and which follows the seat up at a tighter angle.

Amulett family is inclusive and embracing armchairs and footstools that are designed to function in environments with very high demands on comfort, hygiene and safety. The design of the well worked soft armrest and together with the natural material, creates a high tactile sensation. Amulett is generous but still pretty and easily placed. For best hygiene, Amulett has a gap between the seat and back to prevent dirt and bacteria from sticking.

Amulett PS tillverkas i FSC®-mix.

Amulett PS is design by Studio JOOY.


## DIMENSIONS

Height	119 cm
Width	60 cm
Depth	81 cm
Seat height	47 cm
Seat depth	47 cm
Höjd armledare	67 cm

## CERTIFICATIONS



## VIEWS

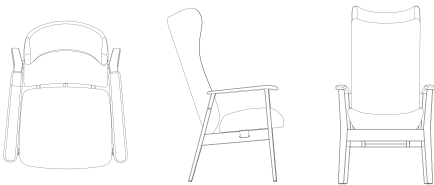

## ADDED VALUE


- Armchair with demands on comfort, hygiene and security
- Generous, neat and easily placed
- Inclusive and embracing
- Gap between seat, back and frame for best hygiene
- Any color
- Tested for public use and meets the requirements for durability & safety, set forth in the following standard, EN 16139
- Tested for 160kg

NC Nordic Care AB

Box 30 573 35 Tranås Sweden

+46(0)140-38 40 60, info@ncnordiccare.se

ncnordiccare.se



## ACCESSORIES

- Frame in FSC®-certified birch or oak
- Frame in any color
- Rubber fabric/hospital fabric

## REUSE

- Solid wood

NC Nordic Care AB

Box 30 573 35 Tranås Sweden

+46(0)140-38 40 60, [info@ncnordiccare.se](mailto:info@ncnordiccare.se)

[ncnordiccare.se](http://ncnordiccare.se)

## FABRIC

- Removable and washable fabrics are washed according to washing instructions. These are sewn with a shrink seam, wash before use for optimal fit.
- Vacuuming with a soft nozzle is often sufficient for cleaning.
- Stains should always be removed as quickly as possible. In most cases, wiping with a damp cloth is sufficient, for more difficult stains, a pH-neutral detergent or a foam detergent for professional use can be used.
- Always use white cloths and avoid wetting a woolen fabric to a greater extent, as this risks remaining stains.
- If necessary, a foam detergent can also be used for a more thorough cleaning if this is allowed in the fabric's specification.

## WOOD

Wood is a living material whose grain from the very beginning has a natural variation in pattern, color tone and luster. The wood is affected by, among other things, the season, heat and humidity. That wood is a living material means:

- Screws need to be re-tightened regularly, at least once a year.
- Solid table tops can naturally warp by up to 0.5%.
- Light from the sun and lighting can cause permanent color and light differences in the surface, so allow the entire wooden surface to be exposed to the same amount of light.

Out of concern for the environment, we paint a large part of our range with water-based surface treatments. This means:

- Spills of coffee and other liquids need to be wiped up immediately.
- For cleaning, hand washing detergent or pH-neutral detergents and lukewarm water are recommended. Wipe off with clean water and wipe dry. Do not use cleaning agents that are alkaline, aggressive, contain abrasives or solvents.
- For disinfection, non-alcohol-based agents are recommended, e.g. Virkon or DAX Alco Free. Alcohol-based agents must not be used.